

操作指导书

JS OMT 在线多路温度检测系统 2023/12




广州璟盛电子科技有限公司
联系人：钟工 13316025098

1 系统配置

1.1 明细

1	JS18	测温探头	330 个
2	JS01	无线数据采集单元	12 个
3	JS5100A	无线接收器	1 个
4	T4900KA	电脑主机+显示屏	1 台
5	JS-OMT	系统软件	1 套
6	14970W	无线扫码枪	1 个
7		适配器线缆等配件	1 批

1.2 配置分布

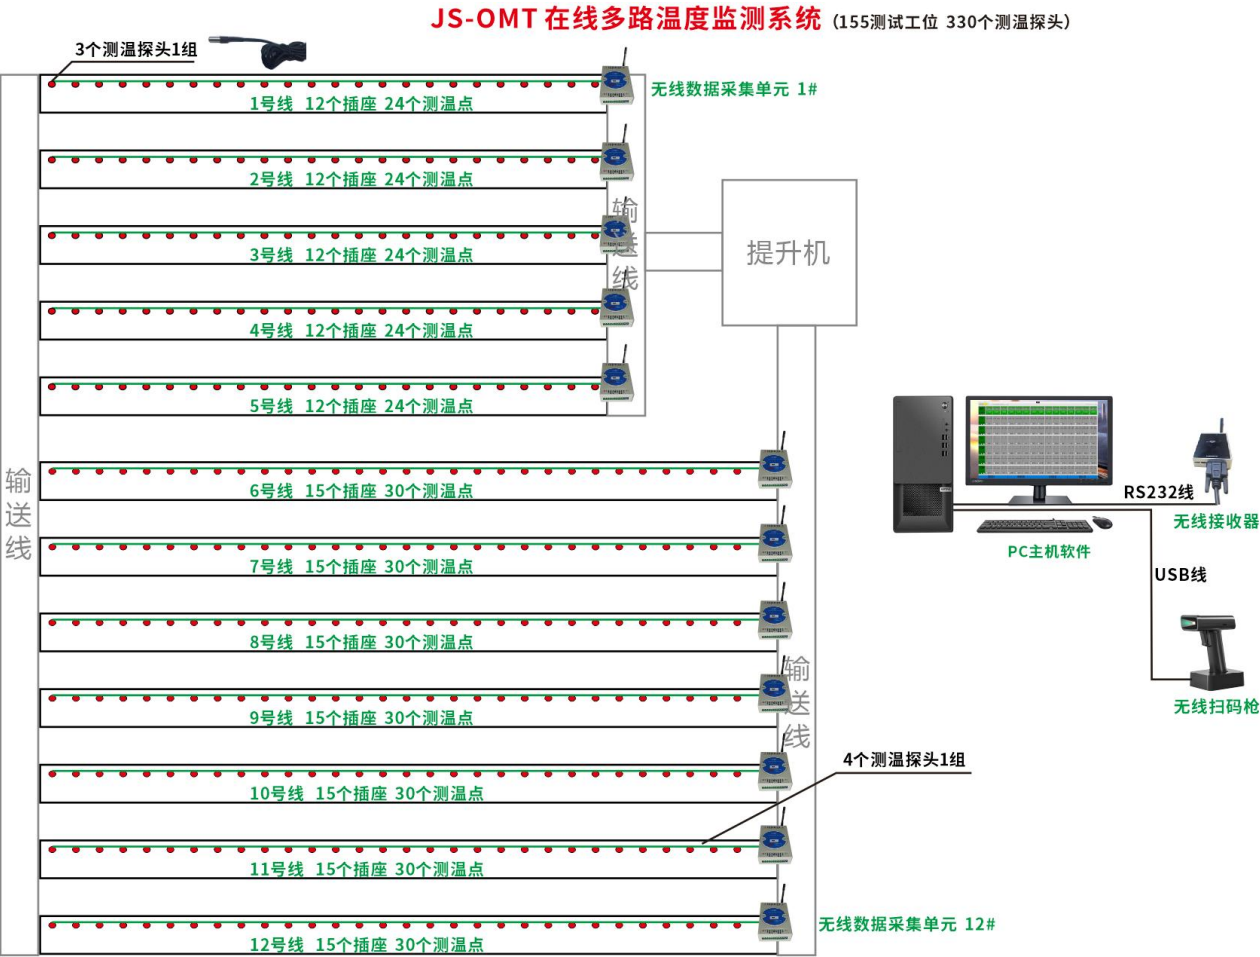

2 硬件说明

2.1 JS18 测温探头



2.2 JS01 无线数据采集单元



2.3 JS5100A 无线接收器




2.4 14970W 无线扫码枪




3 软件说明


3.1 主页面

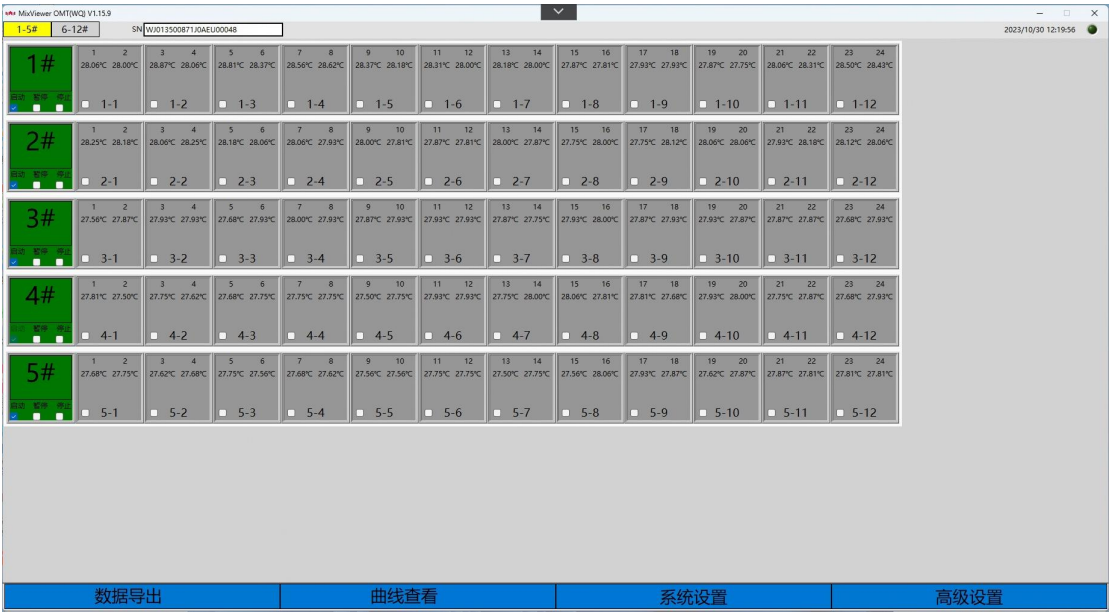


点击切换

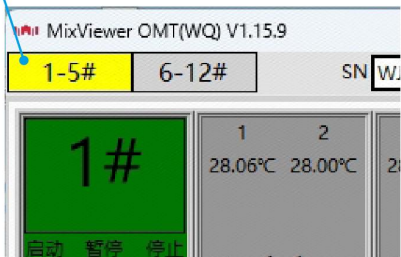

点击切换

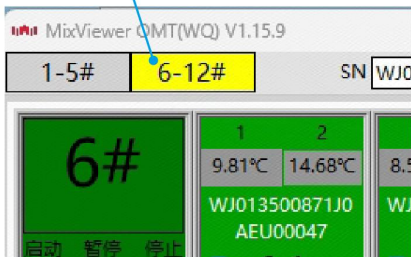

3.2 系统设置

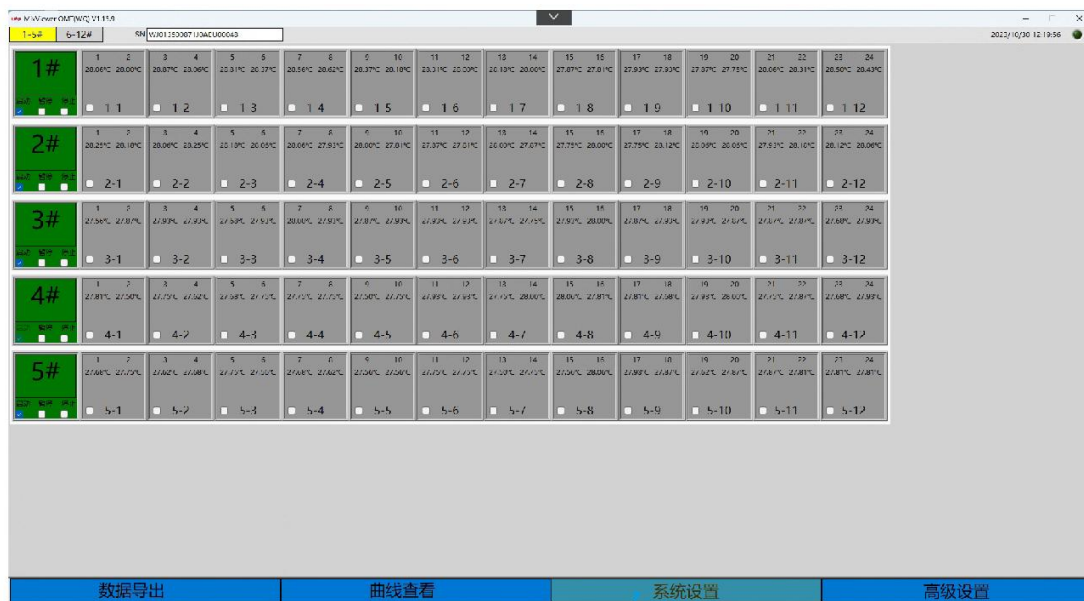

点击




3.3 高级设置（测温探头信息导入与上下限设置）

测温探头信息导入：


新建文件名为《配置文件》的 EXECL 表格，并填写测温探头相应信息


文件固定名为《配置文件》

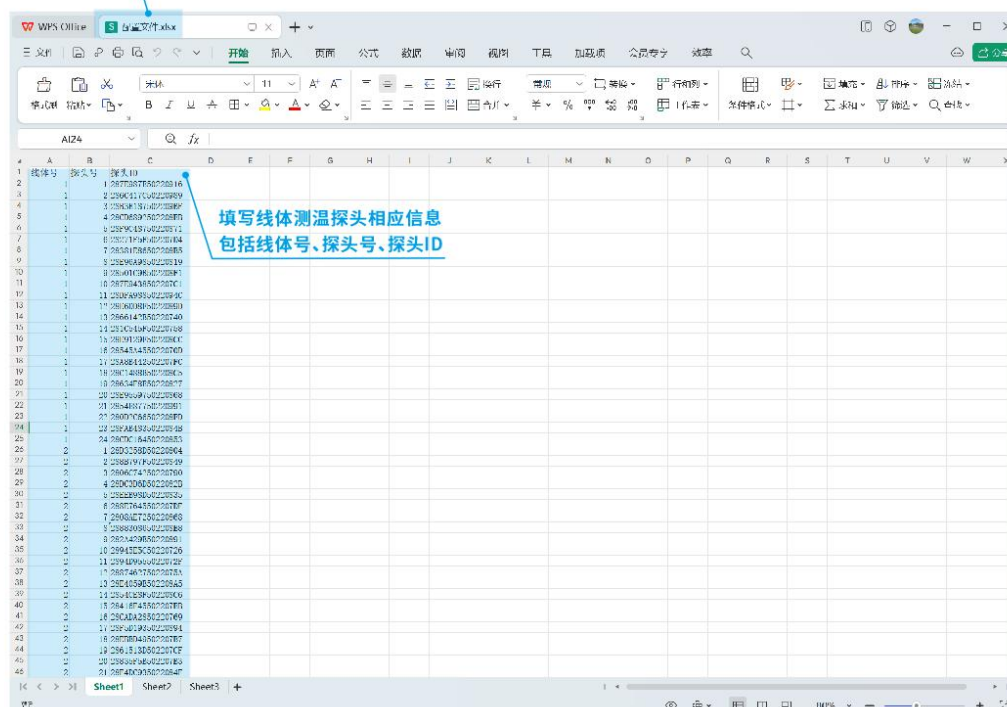

保存至指定目录

文件需保存在指定运行软件的数据目录

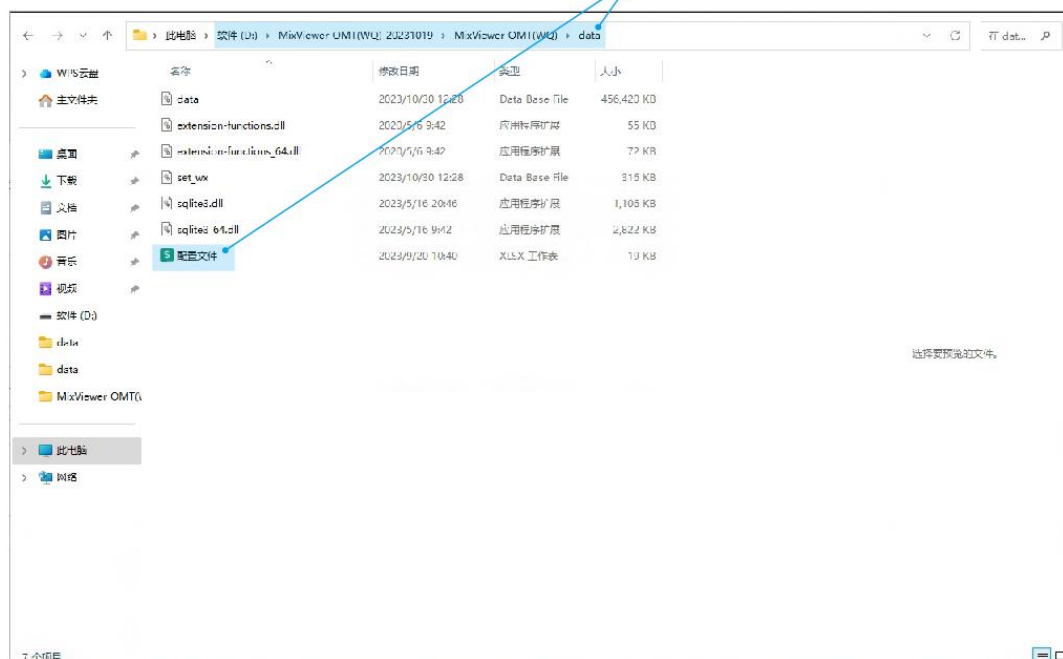

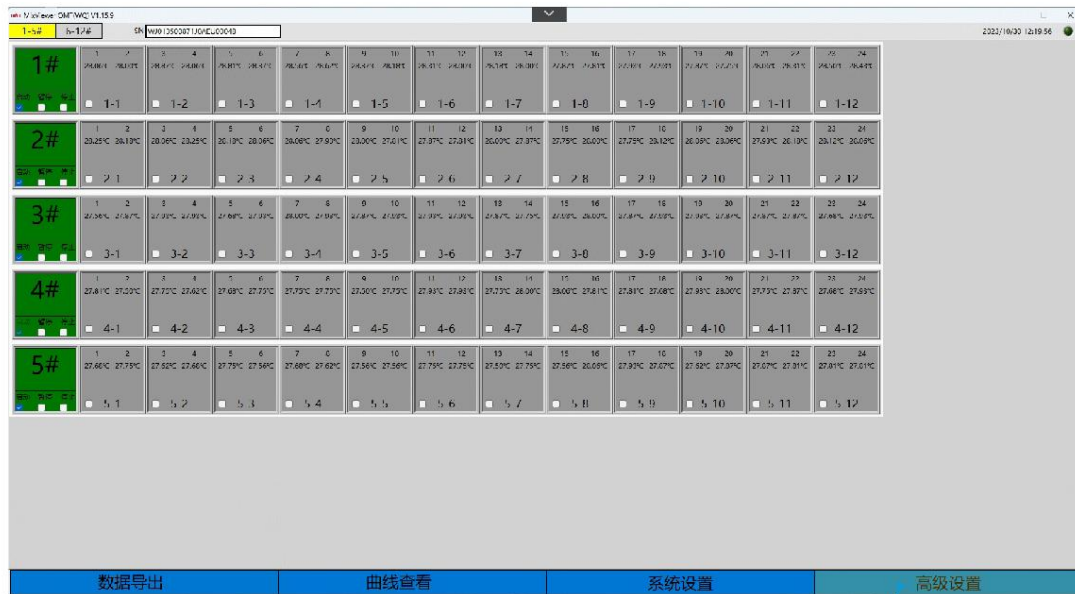

高级设置

	ID	线体号	探头号	温度	温度上限	温度下限
1	☐ 287E987E50220916	1	1			
2	☐ 286C417C50220909	1	2			
3	☐ 28B3E187502209BF	1	3			
4	☐ 28CD6892502208EB	1	4			
5	☐ 28F9C48750220871	1	5			
6	☐ 28271F5F502207D4	1	6			
7	☐ 28381E86502208B5	1	7			
8	☐ 28E96A9850220819	1	8			
9	☐ 28501C9B502208F1	1	9			
10	☐ 287E9438502207C1	1	10			
11	☐ 28DFA9885022094C	1	11			
12	☐ 28E6DD8F5022089D	1	12			
13	☐ 2866142B50220740	1	13			
14	☐ 281C545F50220758	1	14			

点击可查询导入测温探头信息是否准确

查询设备

查询

上下限设置

温度上限 0 温度下限 0



启用 ☐

设置


点击勾选启用

点击设置确认


3.4 曲线查看

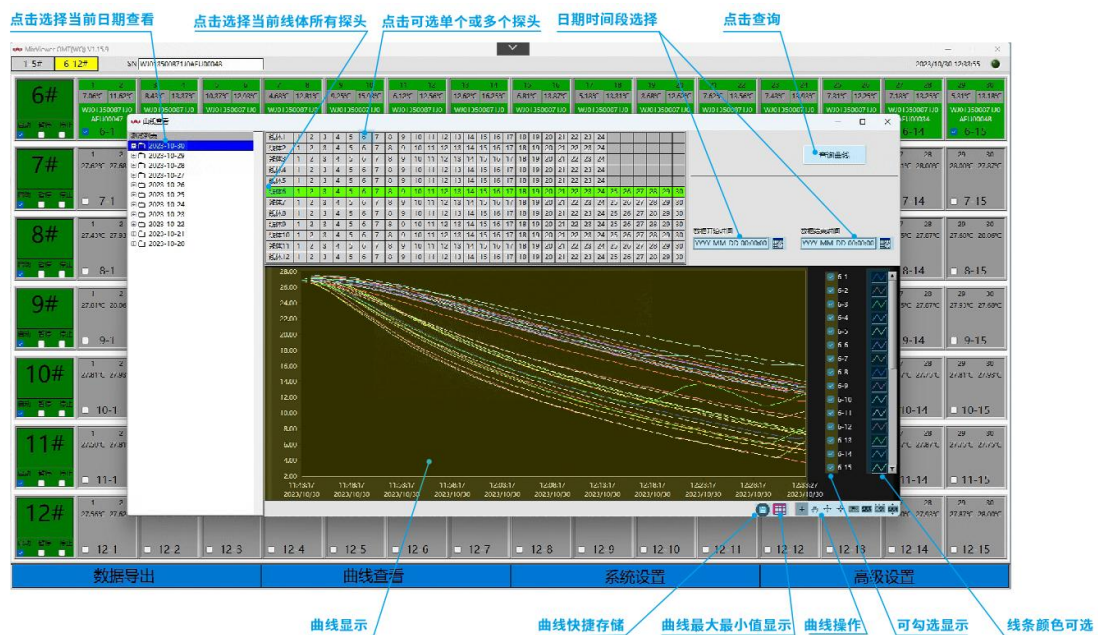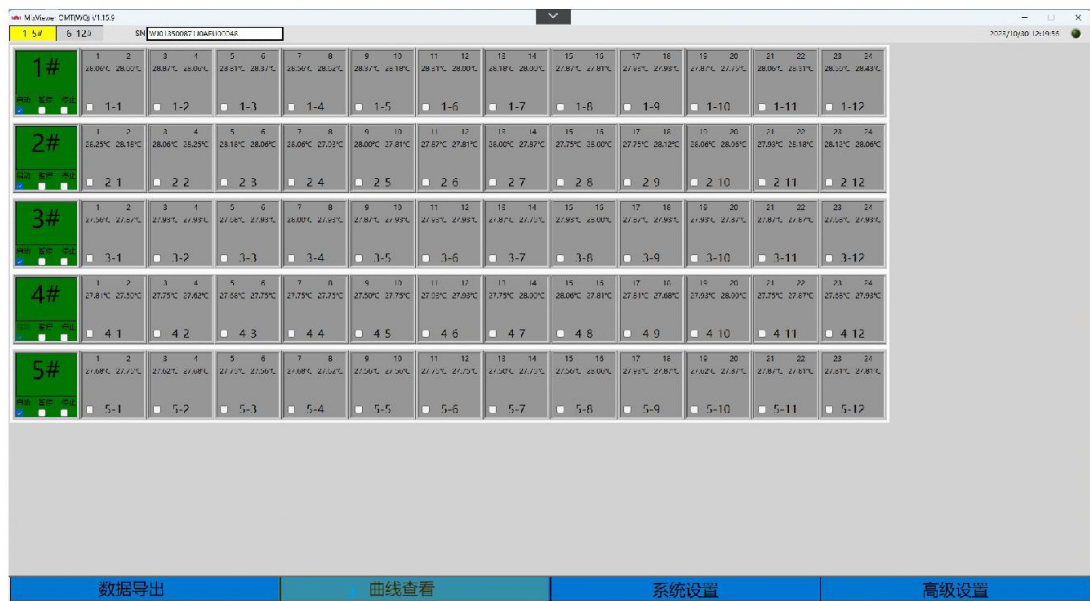

点击可选单个或多个探头

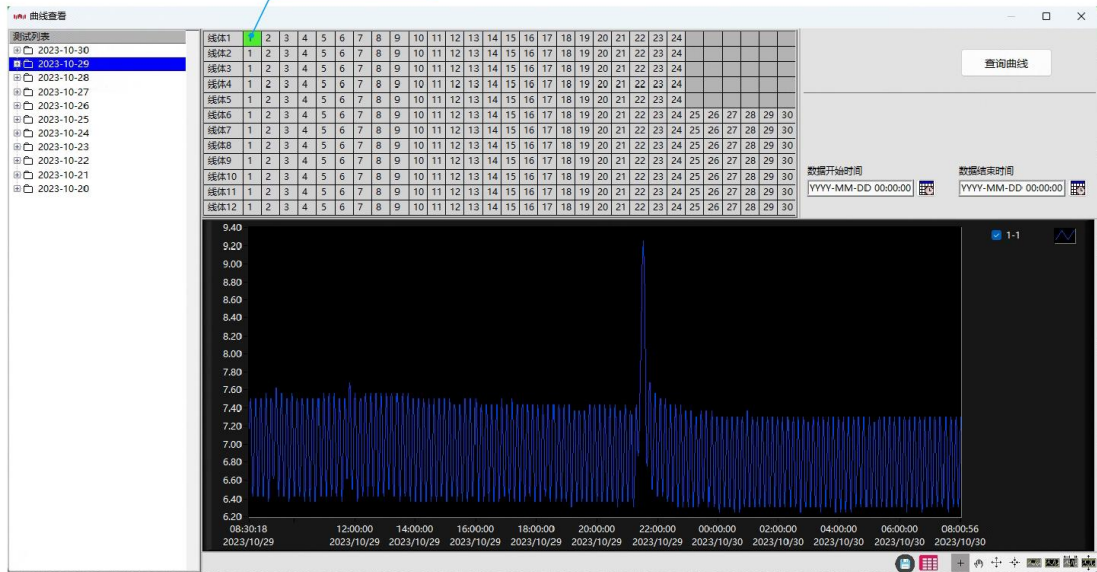


3.5 数据导出（包括曲线判断、数据汇总）

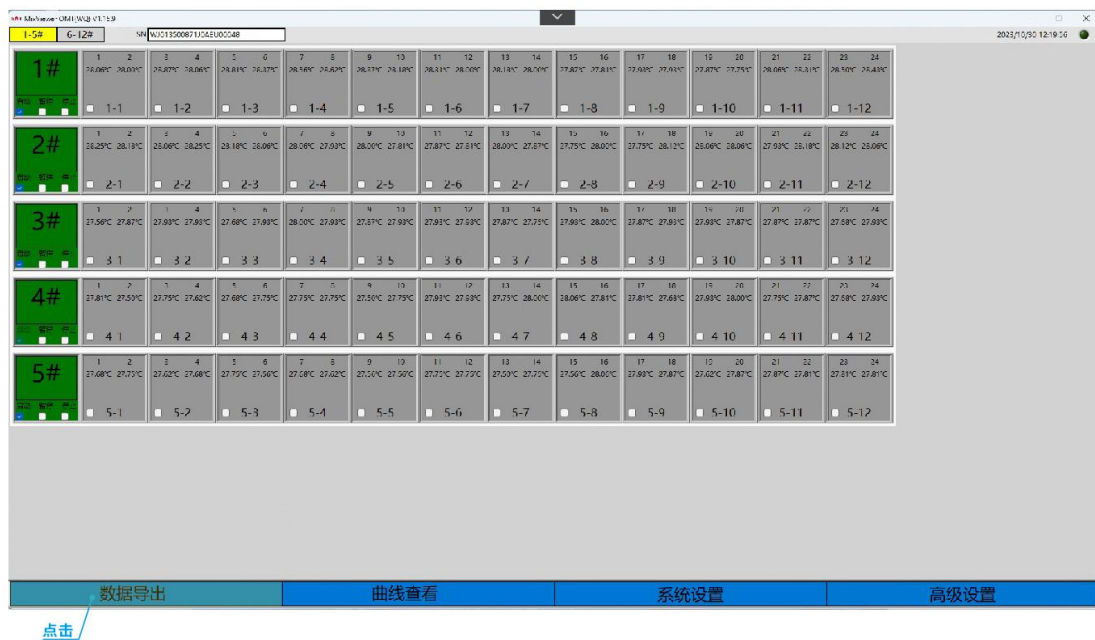

数据导出

The screenshot shows the '数据导出' (Data Export) dialog box. It includes a search bar for '输入测试编号' (Enter test number) and a '数据导出' (Data Export) button. Below the search bar is a list of test numbers (e.g., 1-1, 1-2, etc.). To the right, there's a table with columns for '探头' (Probe), '曲线' (Curve), and '汇总' (Summary). The table contains data for various test numbers and time intervals. Annotations highlight key features: '点击选择当前日期查看' (Click to select current date for viewing), '点击可选单个或多个探头' (Click to select single or multiple probes), '日期时间段选择' (Date and time range selection), '点击搜索' (Click to search), '点击导出数据' (Click to export data), and '搜索展现信息可选' (Searchable display information is optional). A blue arrow points to the '数据导出' button with the label '点击' (Click).

下线产品曲线判断

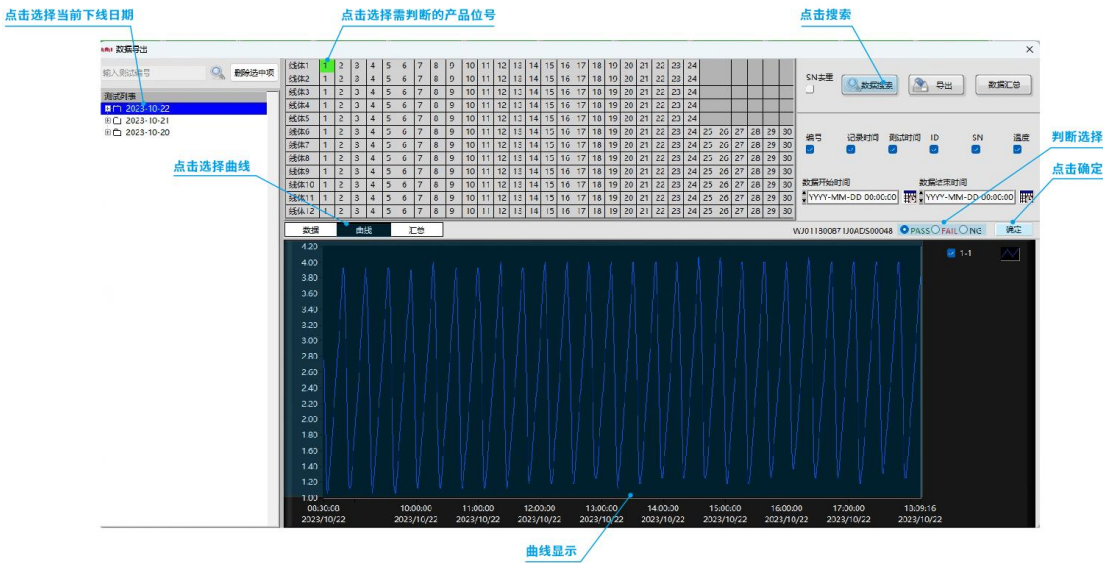

汇总导出

Click to select summary

Click to select current offline date

Click to export

日期	备注	SN	记录时间
2023-10-30	上线产品 (15)		
2023-10-30 11:44:30		WJ013500871J04EU00034	2023-10-30 11:44:30
2023-10-30 11:44:24		WJ013500871J04EU00035	2023-10-30 11:44:24
2023-10-30 11:44:18		WJ013500871J04EU00036	2023-10-30 11:44:18
2023-10-30 11:44:10		WJ013500871J04EU00037	2023-10-30 11:44:10
2023-10-30 11:44:03		WJ013500871J04EU00038	2023-10-30 11:44:03
2023-10-30 11:43:56		WJ013500871J04EU00039	2023-10-30 11:43:56
2023-10-30 11:43:49		WJ013500871J04EU00040	2023-10-30 11:43:49
2023-10-30 11:43:40		WJ013500871J04EU00041	2023-10-30 11:43:40
2023-10-30 11:43:34		WJ013500871J04EU00042	2023-10-30 11:43:34
2023-10-30 11:43:27		WJ013500871J04EU00043	2023-10-30 11:43:27
2023-10-30 11:43:21		WJ013500871J04EU00044	2023-10-30 11:43:21
2023-10-30 11:43:16		WJ013500871J04EU00045	2023-10-30 11:43:16
2023-10-30 11:43:10		WJ013500871J04EU00046	2023-10-30 11:43:10
2023-10-30 11:43:05		WJ013500871J04EU00047	2023-10-30 11:43:05
2023-10-30 11:44:37		WJ013500871J04EU00048	2023-10-30 11:44:37
2023-10-30	下线产品 (0)		
2023-10-29			
2023-10-28			
2023-10-27			
2023-10-26			

WPS Office 20231030122727A6

文件 格式 数据 视图 窗口 帮助

开始 插入 公式 数据 视图 窗口 帮助

格式刷 背景色 边框 字体 段落 表格 数据 窗口 帮助

2023/10/30 11:44:19

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U
1	设备	名称	位置	记录时间																
2	2023/10/30																			
3	上送设备 (15)																			
4																				
5																				
6																				
7																				
8																				
9																				
10																				
11																				
12																				
13																				
14																				
15																				
16																				
17																				
18																				
19	上送设备 (10)																			
20	设备																			
21	设备																			
22	设备																			
23	上送设备 (10)																			
24	设备																			
25	上送设备 (10)																			
26	设备																			
27	设备																			
28	设备																			
29	上送设备 (10)																			
30	设备																			
31																				
32																				
33																				
34																				
35																				
36																				
37																				
38																				
39																				
40																				
41																				
42																				
43																				

汇总信息

3.6 历史数据查询

输入产品系列号

点击搜索

点击数据搜索

点击导出数据

显示当前产品系列号

点击切换显示数据或曲线

数据或曲线显示

数据导出

WD016000871J0AFM00043

删除选中项

测试列表

2023-12-21

WD016000871J0AFM00043

线体1

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

线体2

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

线体3

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

线体4

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

线体5

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

线体6

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

线体7

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

线体8

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

线体9

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

线体10

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

线体11

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

线体12

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

数据

曲线

汇总

5-1

PASS

FAIL

NG

确定

备注	编号	记录时间	测试时间	ID	SN	温度	
1	PASS	5-5	2023-12-21 11:02:59	00 00:00:07	283A988350220843	WD016000871J0AFM00043	14.43
2	PASS	5-5	2023-12-21 11:03:20	00 00:00:27	283A988350220843	WD016000871J0AFM00043	14.18
3	PASS	5-5	2023-12-21 11:03:59	00 00:01:07	283A988350220843	WD016000871J0AFM00043	13.50
4	PASS	5-5	2023-12-21 11:04:38	00 00:01:46	283A988350220843	WD016000871J0AFM00043	12.68
5	PASS	5-5	2023-12-21 11:05:17	00 00:02:25	283A988350220843	WD016000871J0AFM00043	11.81
6	PASS	5-5	2023-12-21 11:05:56	00 00:03:04	283A988350220843	WD016000871J0AFM00043	10.87
7	PASS	5-5	2023-12-21 11:06:36	00 00:03:43	283A988350220843	WD016000871J0AFM00043	10.00
8	PASS	5-5	2023-12-21 11:07:15	00 00:04:23	283A988350220843	WD016000871J0AFM00043	9.12
9	PASS	5-5	2023-12-21 11:07:54	00 00:05:02	283A988350220843	WD016000871J0AFM00043	8.31
10	PASS	5-5	2023-12-21 11:08:33	00 00:05:41	283A988350220843	WD016000871J0AFM00043	7.56
11	PASS	5-5	2023-12-21 11:09:12	00 00:06:20	283A988350220843	WD016000871J0AFM00043	6.87
12	PASS	5-5	2023-12-21 11:09:53	00 00:07:01	283A988350220843	WD016000871J0AFM00043	6.25
13	PASS	5-5	2023-12-21 11:10:32	00 00:07:40	283A988350220843	WD016000871J0AFM00043	5.56
14	PASS	5-5	2023-12-21 11:11:11	00 00:08:19	283A988350220843	WD016000871J0AFM00043	5.00
15	PASS	5-5	2023-12-21 11:11:50	00 00:08:58	283A988350220843	WD016000871J0AFM00043	4.50
16	PASS	5-5	2023-12-21 11:12:30	00 00:09:37	283A988350220843	WD016000871J0AFM00043	4.00
17	PASS	5-5	2023-12-21 11:13:09	00 00:10:17	283A988350220843	WD016000871J0AFM00043	3.56
18	PASS	5-5	2023-12-21 11:13:48	00 00:10:56	283A988350220843	WD016000871J0AFM00043	3.12
19	PASS	5-5	2023-12-21 11:14:27	00 00:11:35	283A988350220843	WD016000871J0AFM00043	2.75

4 产品上线测试操作

STEP 1 点击勾选上线产品线体

扫码成功自动启动当前位
底框变为绿色, 数据开始存储

上线产品线体勾选启动

6#	6-1	6-2	6-3	6-4	6-5	6-6	6-7	6-8	6-9	6-10	6-11	6-12	6-13	6-14	6-15
27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C
7#	7-1	7-2	7-3	7-4	7-5	7-6	7-7	7-8	7-9	7-10	7-11	7-12	7-13	7-14	7-15
27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C
8#	8-1	8-2	8-3	8-4	8-5	8-6	8-7	8-8	8-9	8-10	8-11	8-12	8-13	8-14	8-15
27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C
9#	9-1	9-2	9-3	9-4	9-5	9-6	9-7	9-8	9-9	9-10	9-11	9-12	9-13	9-14	9-15
27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C
10#	10-1	10-2	10-3	10-4	10-5	10-6	10-7	10-8	10-9	10-10	10-11	10-12	10-13	10-14	10-15
27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C
11#	11-1	11-2	11-3	11-4	11-5	11-6	11-7	11-8	11-9	11-10	11-11	11-12	11-13	11-14	11-15
27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C
12#	12-1	12-2	12-3	12-4	12-5	12-6	12-7	12-8	12-9	12-10	12-11	12-12	12-13	12-14	12-15
27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C	27.58°C


数据导出 曲线查看 系统设置 高级设置

STEP 2 扫码启动测试与数据存储

单探头测试: 扫第一个探头条码后扫产品条码

双探头测试: 扫第一个探头条码后扫产品条码

再扫第二探头

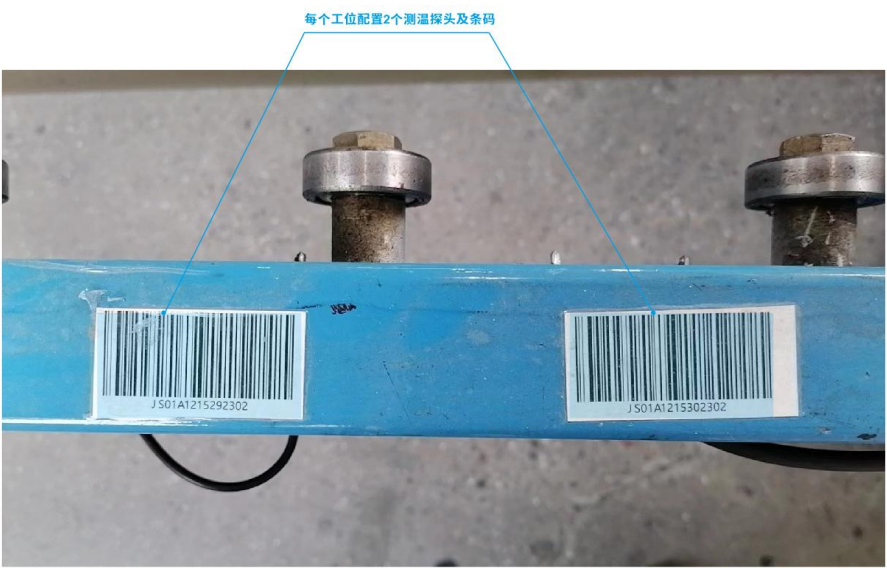

5 数据备份

****本系统支持最大 2G 数据文件，请在系统软件运行变慢或文件达到 1G 以上时进行移出备份操作**

